

Supplement to Yanmar Kit Installation Instructions

## SAFETY


This product is designed and intended only for use with a YANMAR engine. All safety and warning information contained in the Yanmar Operation Manual and Service Manual is adopted and incorporated to apply to the components, accessories, and parts that are utilized with Yanmar engines. Follow all instructions and precautions before installing this product, before operating, during operation, and during periodic maintenance procedures for your safety, the safety of others, and to protect the performance of your engine.



Remarks	Quantity	Description	Part No.		Item I
	1	Label, Yanmar	119128-07000*		1 -
	1	Radiator CMP	119128-44511*		2 -
	1	Radiator Assembly	119128-44540*		3 -
	1	Shroud	119128-44530*	_	4 -
	4	Gasket	119128-44550*		5 -
				-	
	2	Clip, Hose	121250-44590*		6 -
	1	Cap, Radiator	129107-44590*	-	
	1	Pipe, Fuel Oil L650	121492-59090*		8 -
	4	Bolt, M8 X 1.25 - 12 (Flanged hex head)	26014-060122*	-	9 -
	2	Rubber, Cushion	119128-44640*		10 -
	2	Rubber, Radiator	119255-44660*		11 -
	1	Screen, Radiator	119128-44801*		12 -
	2	Spacer, Radiator	119128-44890*		13 -
	2	Stay C, Radiator	119028-44930*		14 -
	1	Bracket C, Radiator	119128-44971*		15 -
	1 1	Cap, Fuel Oil Clamp, Hose 13	129461-59580* 23000-013000*		16 - 17 -
		Bolt, M6 X 1.25 - 12 (Flanged hex head)			17 -
	6 4	Bolt, M8 X 1.25 - 12 (Flanged hex head)	26106-060122* 26106-080122*		10 -
	4	Bolt, M8 X 1.25 - 20 (Flanged hex head)	26106-080202*		20 -
	2	Nut, M6 X 1.23 - 20 (Hanged hex head)	26366-060002*		20 -
	2	Nut, M8 X 1.25 (Flanged hex head)	26366-080002*		22 -
	2	Tank Assy, Sub	121468-44520*		22 -
	1	Body, Sub Tank	121470-44530*	- x	23 -
	1	Cap	121450-44531*		25 -
	1	Retainer, Pipe	124450-44560*		26 -
	1	Gasket	121470-44581*		27 -
	1	Hose, 7 x 130	23065-070130*		28 -
	1	Guard, Fan	119128-44561*		29 -
	2	Rubber, Cushion	119128-44640*		30 -
	1	Stay A, Radiator	119128-44810*		31 -
	1	Stay B, Radiator	119128-44820*		32 -
	1	Bracket, Sub Tank	119128-44901*		33 -
	1	Bracket, Int. Radiator	119128-44950*		34 -
	1	Bracket, Ex. Radiator	119128-44960*		35 -
	1	CW-T (A)	119128-49010*		36 -
	1	CW-T (B)	119128-49020*		37 -
	1	Cover, Alternator	119128-77402*		38 -
	2	Mounting Foot	119128-08111*		39 -
	4	Bolt, M10 X 1.5 - 20 (Flanged hex head)	26106-100202*		40 -
	4	Bolt, M10 X 1.5 - 25 (Flanged hex head)	26106-100252*		41 -
	4	Clamp, Hose 35	23000-035000*		42 -
	9	Bolt, M6 X 1 - 16 (Flanged hex head)	26106-060162*		43 -
	2	Bolt, M8 X 1.25 - 16 (Flanged hex head)	26106-080162*		44 -
	4	Bolt, M8 X 1.25 - 12 (Flanged hex head)	26106-080122*		45 -
	6	Nut, M6 X 1.0 (Flanged hex head)	26306-060002		46

PAGE 1 OF 5

KR11 - RADIATOR KIT INS-KR11-0016

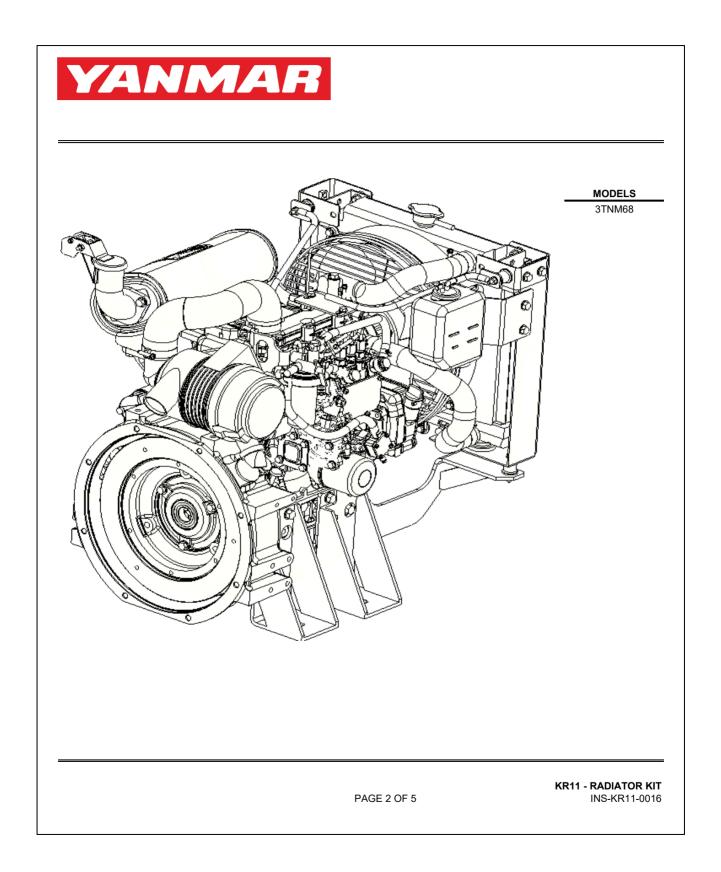




## Installation Instructions


Hand tighten all bolts and nuts until assembly is completed, then torque according to specifications in Table 1. The numbers in () represent the item numbers.

WARNING: DO NOT RUN ENGINE WITHOUT COOLANT IN RADIATOR.

1. Fasten the intake and exhaust side lower radiator support brackets (34,35) to the front engine mounting pads with M10 X 1.5 - 20mm bolts (40) according to the picture.

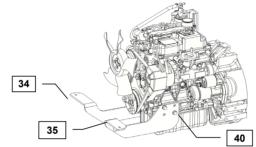


2. Fasten each engine foot (39) to the front engine mounting pad with the M10 X 1.5 - 25mm bolts provided (41).

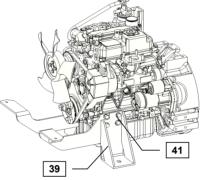

3. Fasten the exhaust side upper support bracket (31) to the exhaust side of the cylinder head with the M8 X 1.25 - 12mm bolts provided (45). Fasten the intake side upper support bracket (32) to the top face of the intake manifold with the M8 X 1.25 - 16mm bolts provided (44).


PAGE 3 OF 5

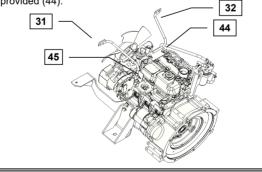


KR11 - RADIATOR KIT INS-KR11-0016



4. Fasten the isolator mounts (30) to the all four mounting locations on the radiator assembly (3) with the M6 X 1.0mm nuts provided (46).

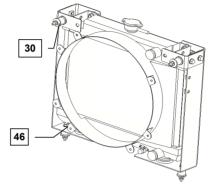

5. Remove the fan guard (29) from the radiator assembly and place it around the cooling fan.

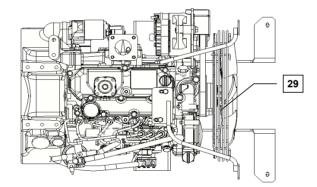


- 6. Install the pre-assembled radiator (3) to the lower radiator mounting brackets using the rubber isolators and M6 x 1.00mm nuts (46) provided with the radiator kit.
- 7. Mount the fan guard (29) to the radiator sub-assembly (3) using M6 X 1.0 16mm bolts provided (43).
- 8. Fasten the upper support brackets (31,32) to the upper rubber isolators (30) with the M6 X 1.0mm nuts (46).
- 9. Attach the top radiator hose (36) to the inlet of the radiator (3) and the outlet of the water pump with hose clamps (42). Attach the bottom radiator hose (37) to the outlet of radiator and the inlet of water pump with hose clamps (42).

PAGE 4 OF 5


KR11 - RADIATOR KIT INS-KR11-0016



10. Mount overflow bottle assembly (23) to the side of the radiator (3) using M8 X 1.25 - 12mm bolts (45). Attach the overflow hose to the inlet of the overflow bottle and the top of radiator using hose clamps included with the overflow bottle

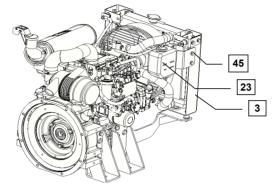

11. Option: To add the alternator cover (38) remove the existing alternator fasteners and add the cover according to the image on page 2.

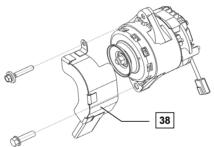

- 12. Tighten all remaining bolts and nuts according to specification in Table 1.
- 13. Add antifreeze, using a 50:50 mixture, into the Radiator. After running the engine for a few minutes, add more antifreeze mixture if necessary.

NOTE: Comply with torque standards in the table to avoid unexpected damage during installation or in the future.

Diameter x Pitch	Kgf-m	Foot-lbf	N-m	
1/4 X 20	0.9 ~ 1.1	6.3 ~ 8.3	8.5 ~ 11.3	
M5 X 0.8	0.7 ~ 0.9	4.8 ~ 6.3	6.5 ~ 8.5	
M6 x 1.00	1.0 ~1.2	7.2 ~ 8.6	9.8 ~11.8	
M8 x 1.25	1.5 ~ 2.9	10.6 ~ 20.9	14.4 ~ 28.3	
M10 x 1.50	4.5 ~ 5.5	32.5 ~ 39.8	44.0 ~ 54.0	
1/2 X 13	7.9 ~ 10.1	57 ~ 73	77.3 ~ 98.9	

KR11 - RADIATOR KIT INS-KR11-0016

PAGE 5 OF 5